



Pos.	Bezeichnung	Description	Pos.	Bezeichnung	Description
rc2200d-01	Schutzkappe	Rear Rubber	rc2200d-40tk	Ventilblockdichtung	Valve Block Gasket
rc2200d-02tk	Dichtung	Oil Seal	rc2200d-41	Ventilblock	Valve Block
rc2200d-03	Gehäuse inkl. Umschalterb. T35	Housing incl. Valve-Sleeve Par	rc2200d-42	Ventilblockschraube	Cap Screw
rc2200d-04	Spindelbuchse	Anvil Bushing	rc2200d-43	Lufteingangsverschraubung	House Adapter
rc2200d-05	Distanzring	Spacer	rc2200d-44tk	O-Ring	O-Ring
rc2200d-06rk	O-Ring	O-Ring	rc2200d-45	Luftmengenregulierung	Air Regulator
rc2200d-07rk	Nußhaltering	Anvil Collar	rc2200d-46	Blechschrabe	Self Tapping Screw
rc2200d-08	Spindel 1"	Anvil 1"	rc2200d-47tk	O-Ring	O-Ring
rc2200d-09rk	Feder = für rc2200b-32	Spring	rc2200d-48	Ventilstange	Valve Stem
rc2200d-10rk	Schlagbolzen	Hammer Pin	rc2200d-49tk	O-Ring	O-Ring
rc2200d-11	Nockensteuerhülse	Cam	rc2200d-50	Ventilstößel	Throttle Valve
rc2200d-12tk	Schlagwerkzeugkugel	Steel Ball	rc2200d-51tk	O-Ring, Kappe	O-Ring, Retainer
rc2200d-13	Kugelführungshülse	Driver Cam Foundation	rc2200d-52rk	Feder	Spring
rc2200d-14	Schlagwerkkorb	Hammer Cage	rc2200d-54	Schutzring	Protect Guard
rc2200d-15rk	Kugellager	Ball Bearing	rc2200d-rk	Reparatursatz	Repair kit
rc2200d-16tk	O-Ring	O-Ring	rc2200d-tk	Wartungssatz	Tune up kit
rc2200d-17tk	Öldichtung	Oil Seal			
rc2200d-18	Motorendplatte, vorne	Front End Plate			
rc2200d-19	Zylinder	Cylinder			
rc2200d-20	Rotor	Rotor			
rc2200d-21tk	Lamelle	Rotor Blade			
rc2200d-22	Motorendplatte, hinten	Rear End Plate			
rc2200d-23rk	Kugellager	Ball Bearing			
rc2200d-24tk	Deckeldichtung	Rear Gasket			
rc2200d-25	Gehäusedeckel	Housing Cover			
rc2200d-26	Federring	Spring Washer			
rc2200d-27	Motorschraube	Cap Screw			
rc2200d-28	Federring	Spring Washer			
rc2200d-29	Deckelschraube	Cap Screw			
rc2200d-30	Ölschraube	Oil Screw			
rc2200d-31	Luftleitblech	Exhaust Deflector			
rc2200d-32rk	Stift	Pin			
rc2200d-33rk	Feder	Spring			
rc2200d-34rk	Gewindeschraube	Set Screw			
rc2200d-35	Umschalterbuchse	Valve Sleeve			
rc2200d-36	Umschalter	Reverse Valve			
rc2200d-37	Betätigungshebel	Trigger			
rc2200d-38	Spannstift	Spring Pin			
rc2200d-39	Spannstift	Spring Pin			

Bei Ersatzteilbestellungen bitte Positions-Nr. und Beschreibung angeben!

By Spare parts orders pls. indicate Position-no. and Description!

Wartungssatz = Alle Teile mit TK / Reparatursatz = Alle Teile mit TK+RK

Tune up Kit = All parts with TK / Repair Kit = All parts with TK+RK